

Changing your bottleless filter: For videos and more info, go to bottleless.com/support



Find your filter

Your filter may be mounted to the back of your cooler or under the sink...




Find your filter

...or the filter may be inside the cooler. If you don't know how to open the cooler, please visit bottleless.com/support




You'll need a bucket or a trashcan

The only tool you'll need (in most instances) is a bucket or a trashcan

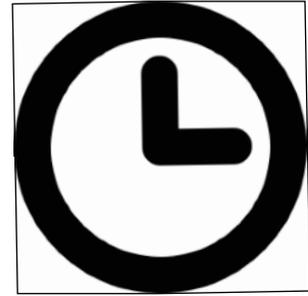

You'll need 10-15 minutes

Changing your filter should only take 10-15 minutes time.

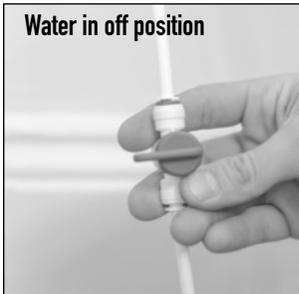

Water in off position


1. Turn the water off

Locate the water shut off valve. It may be behind the cooler or under the closest sink. Turn water off.



2. Drain cold water

Using a bucket or trashcan, drain the water from the cold faucet.

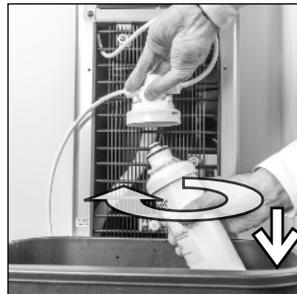

3. Remove Filter

Move trash can or bucket under the filter to catch drips. While holding the filter head, rotate the filter in a clockwise direction. Then, pull filter down away from




4. Write today's date on the new filter

The filter should be changed every 6 months. To be sure of this, write today's date on the filter label.




5. Insert filter into to filter head

Push filter up into filter head by rotating it around until it "fits". Then, push all the way up.

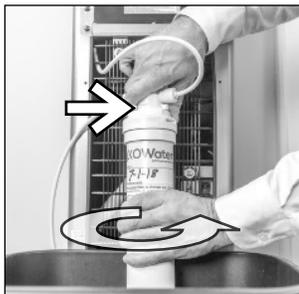

6. Rotate filter until it stops

While holding the filter head, rotate the filter in a counter clockwise direction until it stops.

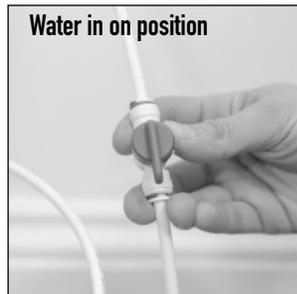

Water in on position

7. Turn water on

Turn water on by rotating valve so that it is parallel with the waterway and see if the cooler is working.



8. flush filter

Place bucket or trash can under cold faucet. Drain about 2-3 gal. of water into bucket to flush any carbon fines that can come loose during shipping. Allow the water 20-30 minutes to cool back down. That's it! Enjoy!