



INSTALLATION & SET UP MANUAL  
Model Number: MW1-SS

[bottleless.com](http://bottleless.com)

XOWATER

## PREPARING THE DENALI COOLER:



### 6' FEET FROM OUTLET

The Denali power cord is 6 feet long - so it's best to locate within 6 feet of electrical outlet. You just need a standard 3-prong electrical outlet for the Denali cooler.



### TOOLS YOU'LL NEED

You will need a bucket or a trashcan, a Phillips-head screwdriver and a pair of scissors to complete the set up of your Denali cooler.



### PULL OUT ON TAB ON THE BACK OF THE LID

You need to rotate cooler around so you can access the back. Then pull on the back of the lid so that the tab is released.



### REMOVE PLUG

The electrical plug is located under the lid.



### REMOVE EXTERNAL LID AND SET ASIDE

Remove the lid on the Denali cooler to expose the top of the Float Kit (it is gray and covers the reservoir).



### REMOVE FLOAT KIT LID

You need to remove the float kit lid so that you can check everything underneath & inside reservoir. Just grab the tab on side & lift up



### CHECK THE FLOATS

See the 2 air-filled "floats" - a main "float" (larger) that shuts off the water flow when reservoir is full - and a smaller backup float that shuts off water if the first float were to not activate.




### CHECK BAFFLE

Inside the stainless steel reservoir, you'll find a baffle. Occasionally, this can come loose in transport. If loose, it can rise up and trip the floats. If dislodged, push it into the center hole in the bottom of reservoir.



### TEST MAIN FLOAT

With clean hands (or with a clean utensil), press up on the Main Float to make sure that it moves up and down. If it doesn't move or if it's not attached, just click it into place.

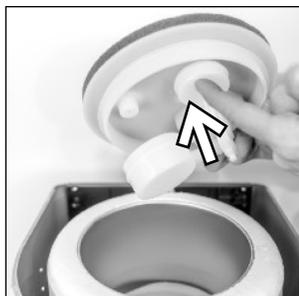

### TEST SECONDARY FLOAT

Now, press up on the Secondary Float to make sure that it moves up and down.



### PRESS DOWN ON FLOAT KIT LID TO REPLACE

Press down on float kit lid to replace it. Make sure it's pressed all the way down to seal the reservoir.




### PRESS RESET BUTTON

If the backup float is tripped, it shuts off all water to the cooler as a safety precaution. (Can happen in transport - or if cooler gets bumped after it is installed). **In the future, if water does not dispense, pushing the reset button usually fixes the issue.**


# INSTALLING THE FILTER INSIDE: PART 1



**REMOVE DRIP TRAY**  
Lift up on drip tray to remove. It just pulls straight up from the cooler.

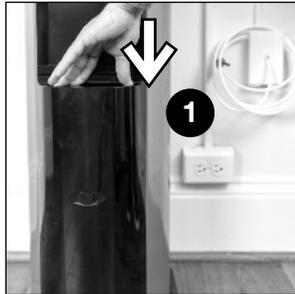


**REMOVE FRONT PANEL:**  
**1) PRESS DOWN ON TOP OF FRONT PANEL**  
First, press down on front panel firmly to get the top tab

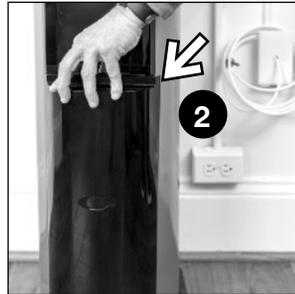


**2) PULL FRONT PANEL TOWARDS YOU**  
Pull top part slightly away from the cooler.



**3) LIFT FRONT PANEL UP**  
Lift it up and out. Once you clear the tab in the previous step, it should lift straight up. Set aside

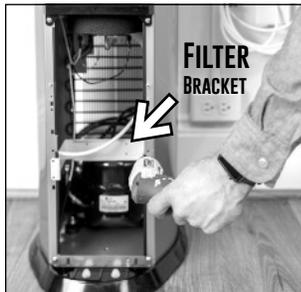


**REMOVE FILTER BRACKET SCREWS**  
Using a Phillips-head screwdriver (photo shows an electric screwdriver), remove the 4 screws that attach the filter bracket to the cooler.

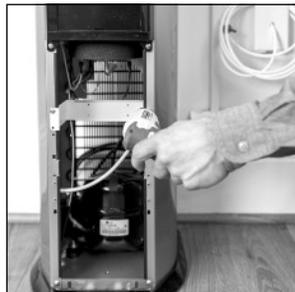


**RE-ATTACH FILTER BRACKET AT TOP**  
The commercial filters that come with your Denali are too tall to be attached at the lower position. Re-attach filter bracket at the higher location.




**LOCATE WATERWAY TO COOLER**  
Inside of the cooler, locate waterway inside the cooler that goes to the cooler's reservoir.

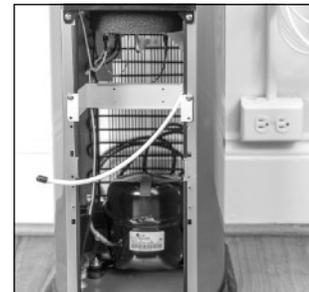


**MAKE SURE INTERNAL WATERWAY IS ABOVE FILTER BRACKET**  
Reach in the cooler and move the waterway above the filter bracket so that it easily attaches to the filter head.

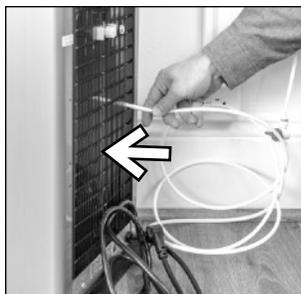


**PUSH WATERWAY FROM SOURCE THROUGH BACK OF COOLER.**  
Push the waterway that comes from the water source (not the one already in the cooler) through the back of the cooler.

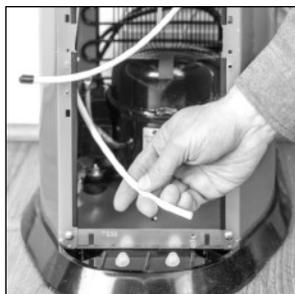

**PULL SOURCE WATERWAY THROUGH**  
Pull the waterway that comes from the water source through the hole so that you have enough length to reach the filter head.

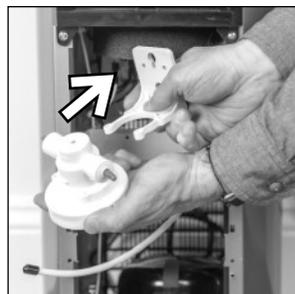


**REMOVE BRACKET FROM FILTER HEAD**  
Pull the filter head bracket off of the filter head. This will be mounted upside down onto the filter bracket that is inside the cooler

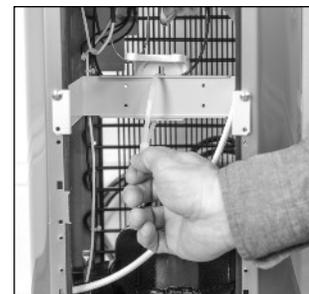


**ATTACH HEAD BRACKET TO FILTER BRACKET WITH A ZIP TIE**  
Position the filter head bracket upside down and behind the filter bracket. Pull the zip tie through the hole in the head bracket and around the filter bracket.


## INSTALLING THE FILTER INSIDE: PART 2

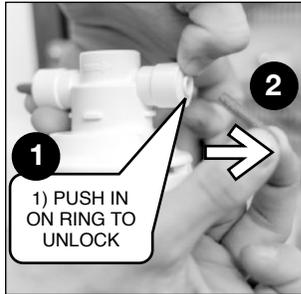

**REMOVE FILTER CAPS**  
Push in on ring around the water inlet or outlet while you simultaneously pull the red cap(s) out. Pushing on the ring unlocks any waterway or caps so they can be removed.

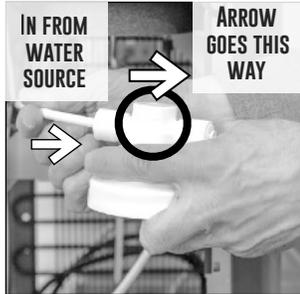


**INSERT WATERWAY FROM WATER SOURCE INTO FILTER HEAD**  
On filter head, please note direction of arrow (shows direction of water flow TO cooler). Push the waterway into head until it stops.

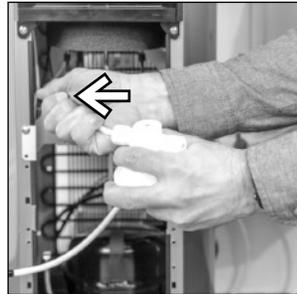


**ONCE WATERWAY IS PUSHED IN, PULL GENTLY TO TEST**  
Pull on the waterway to check that it is secure.



**WRITE DATE ON FILTER**  
Write today's date on the front of the filter so you know when you installed/replaced the filter. Filters should be changed every 6 months and are available on our website or on amazon.com.

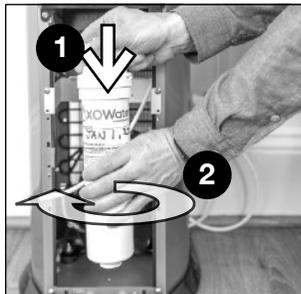


**ATTACH FILTER HEAD TO FILTER BY PUSHING DOWN, THEN ROTATING**  
Push filter head down onto filter by rotating it around until it "fits". Then, push all the way down and then rotate until it stops.

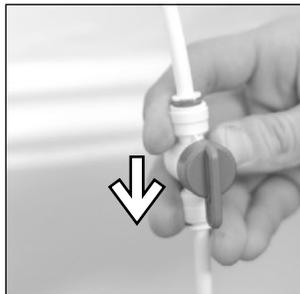


**TURN WATER ON**  
Place filter inside of bucket (next step) so that water will not get on floor. Turn water on by rotating valve so that it is parallel with waterway. The valve may be behind the cooler or at the sink.




**FLUSH THE FILTER**  
Place bucket, trash can or coffee pot under filter. Remember, water flows with arrow. Drain about 3 gallons of water to flush any carbon fines that can come loose during shipping.

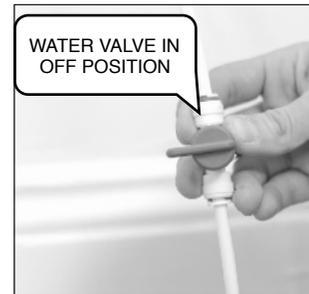


**TURN WATER OFF**  
To turn the water off, turn the valve so that it is perpendicular to the waterway.

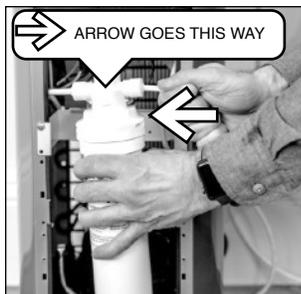

**PUSH WATERWAY THAT GOES TO COOLER INTO FILTER HEAD**  
Remove the black cap and push the waterway that goes TO cooler into head until it stops. Pull gently to make sure that it's secure.

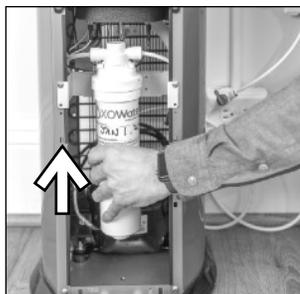

**PUSH FILTER INTO BRACKET**  
Push the filter into the middle filter bracket.

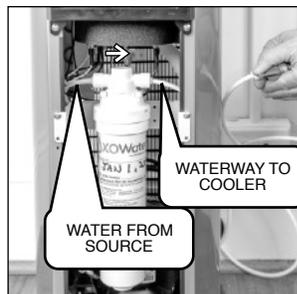

**FILTER IS SECURE IN FILTER BRACKET**  
This is what the filter will look like when it's set up and inside of the Denali cooler.



**TURN WATER ON**  
Your cooler will start to fill up.

## FINAL SET-UP




### FILL HOT TANK

a) Press the red button on the front of hot faucet  
b) Press the cup against the "paddle" portion of the hot faucet and hold.



### HOLD UNTIL WATER COMES OUT OF HOT FAUCET

Hold cup to hot faucet until water comes out (may take 3+ minutes). Release and let cooler fill. **Water must come out of faucet BEFORE turning on hot switch.**

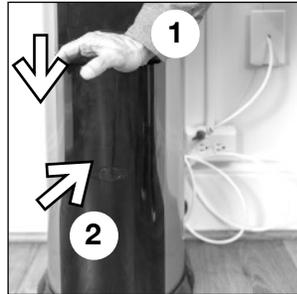


### ATTACH FRONT PANEL

Place bottom of front panel into the base. Then, push down on top so that it can fit into place.



### ATTACH DRIP TRAY

Push drip tray back into place.

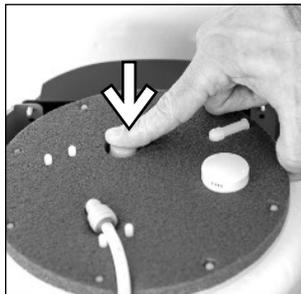

### PRESS RESET BUTTON

Press reset button one more time to be sure that the safety float hasn't been tripped.




### PUT EXTERNAL LID BACK ON COOLER

Press in on the back of the top lid and replace on cooler. You do not need to replace the 2 screws.



### PLUG INTO OUTLET

Plug cooler into standard 3-prong electrical outlet. You do not need to wait for the cooler to fill completely (as long as water was dispensed from the hot faucet).

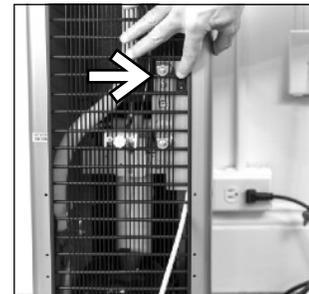

### TURN ON HOT SWITCH

On back of cooler, turn on red hot switch. **TIP:** If you do not want hot water to be dispensed from your cooler, leave this switch off.



### CHECK COLD WATER

It will take about 30 minutes or so for the cooler to heat and chill your water. After about a half hour, take a drink of cold water. Enjoy!



### CHECK HOT WATER

Press the safety button on the front of the hot faucet. Then, push a cup/mug in against the hot faucet "paddle" to make sure the cooler is heating your water. Enjoy!



### IF YOU NEED TO ADJUST COLD TEMP:

Adjust the temperature of cold water by rotating the thermostat control located on back of the cooler. Use a "flat-head" screwdriver. Clockwise is colder.



### IF YOU NEED TO EMPTY WATER FROM COOLER:


Unplug cooler from electrical outlet & let the hot water cool down for an hour+. Then, remove drain plug on back by unscrewing cap. Let water flow into bucket or trash can. Be careful - water may be hot.

## TROUBLESHOOTING: NO WATER FROM COOLER



### ROTATE COOLER TO BACK. PULL ON TAB ON BACK & REMOVE LID

Pull on the back of the lid so that the tab is released. Set lid aside.

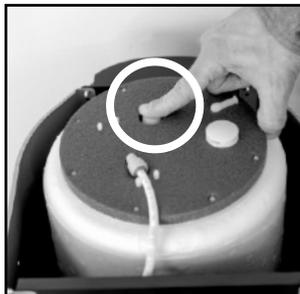


### PRESS RESET BUTTON

If the backup float is tripped, it shuts off all water to the cooler as a safety precaution. This can also happen in transportation or if cooler gets bumped (after it is installed). **In the future, if water does not dispense, pushing the reset button usually fixes the issue.**



### IF LAST STEP DIDN'T GET WATER FLOWING: LET'S TRY SOMETHING ELSE. FIRST, TURN OFF WATER.

Find the water valve (it is usually blue and may be on the back of the cooler or under the sink). Turn the valve so it's perpendicular.

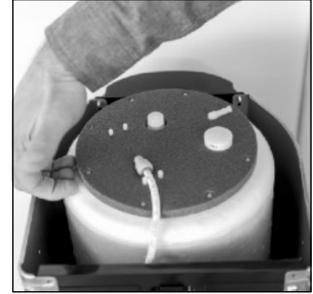

### REMOVE FLOAT KIT LID

Remove the float kit lid so that you can check everything inside the reservoir. Just grab the tab on the sides and lift straight up



### CHECK BAFFLE

Inside the stainless steel reservoir, you'll find a baffle. Occasionally, this can come loose in transport. If loose, it can rise up and trip the floats. If dislodged, push it into the center hole in the bottom of reservoir.



### CHECK THE FLOATS

See the 2 air-filled "floats" - a main "float" (larger) that shuts off the water flow when reservoir is full - and a smaller backup float that shuts off water if the first float were to not activate.



### CHECK MAIN FLOAT

With clean hands (or with a clean utensil), press up on the Main Float to make sure that it moves up and down. If it doesn't move or if it's not attached, just click it into place.



### CHECK BACKUP FLOAT

Now, press up on the Secondary Float to make sure that it moves up and down.



### REPLACE FLOAT KIT LID

Press down on Float Kit Lid to replace it. Make sure it's pressed all the way down to seal the reservoir.



### REPLACE LID

Put the external lid back on the cooler and press on the back so that the tab is clicked into place.



### TURN WATER ON

Turn water on by rotating valve so that it is parallel with the waterway and see if the cooler is working. (Water flow is off when it is perpendicular.)