



SET UP & OPERATION MANUAL
Model Number: MJP-B or W

For operation, set up and installation videos
and additional information, please visit:
www.bottleless.com/support

PREPARING THE COOLER:



6' FEET FROM OUTLET

The Peak power cord is 6 feet long - so it's best to locate within 6 feet of electrical outlet. You just need a standard 3-prong electrical outlet for the Peak cooler.



TOOLS YOU'LL NEED

You will need a bucket or trashcan, a Phillips-head screwdriver and a pair of scissors to complete the set up of your Peak cooler.



REMOVE SCREW FROM SIDE OF PEAK

Using a Phillips-head screwdriver, remove the screw so you can access the top lid. You do not need these screws any more once they are removed.



REMOVE SCREW ON OTHER SIDE



REMOVE EXTERNAL LID AND SET ASIDE

Remove the lid on the Peak cooler to expose the top of the Float Kit (it is gray and covers the reservoir).




REMOVE FLOAT KIT LID

You need to remove the float kit lid so that you can check everything underneath & inside reservoir. Just grab the tab on side & lift up




CHECK THE FLOATS

See the 2 air-filled "floats" - a main "float" (larger) that shuts off the water flow when reservoir is full - and a smaller backup float that shuts off water if the first float were to not activate.

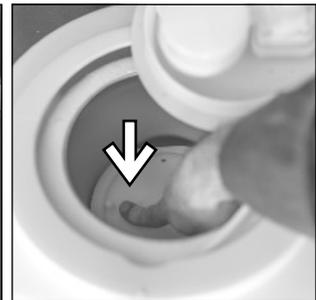


CHECK BAFFLE

Inside the stainless steel reservoir, you'll find a baffle. Occasionally, this can come loose in transport. If loose, it can rise up and trip the floats. If dislodged, push it into the center hole in the bottom of reservoir.

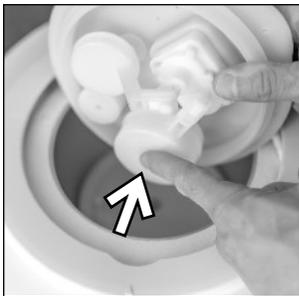


TEST MAIN FLOAT

With clean hands (or with a clean utensil), press up on the Main Float to make sure that it moves up and down. If it doesn't move or if it's not attached, just click it into place.

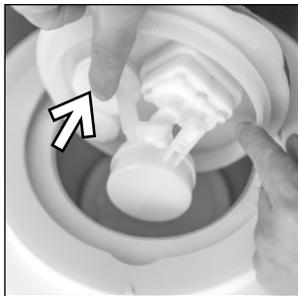

TEST BACKUP FLOAT

Now, press up on the secondary (backup) float to make sure that it moves up and down.

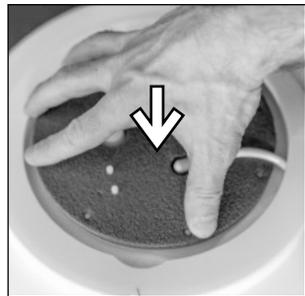

PRESS DOWN ON FLOAT KIT LID TO REPLACE


Press down on float kit lid to replace it. Make sure it's pressed all the way down to seal the reservoir.



PRESS RESET BUTTON

If the backup float is tripped, it shuts off all water to the cooler as a safety precaution. (Can happen in transport - or if cooler gets bumped after it is installed). **In the future, if water does not dispense, pushing the reset button usually fixes the issue.**

INSTALLING THE FILTER

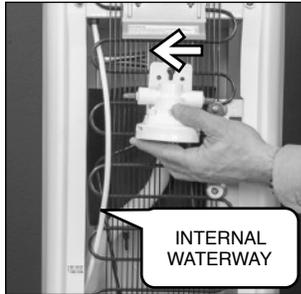


FILTER HEAD PREP

You will be attaching the filter to the back of the cooler. On the front of the filter head, you will find an arrow. You want the arrow pointing towards the white internal waterway that is coming out of the cooler.




IF ARROW IS FACING "WRONG" DIRECTION

If the arrow on the filter head is facing the opposite direction, just rotate it so that the arrow is facing the internal waterway.

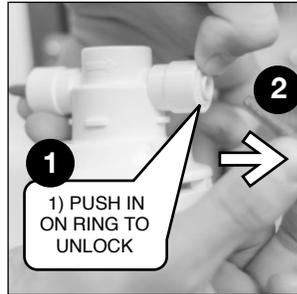

REMOVE FILTER CAPS

Push in on ring around the water inlet or outlet while you simultaneously pull the red cap(s) out. Pushing on the ring unlocks any waterway or caps so they can be removed. Remove caps from both sides.

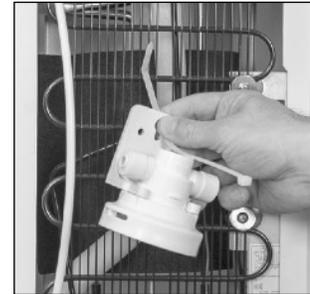


PUT ZIP TIE THROUGH HOLE IN BRACKET

Insert the zip tie through the hole in the bracket that holds the filter head. Bend the end of the zip tie so that you're able to grab it in the next step.



ATTACH FILTER HEAD TO COOLER WITH ZIP TIE

Pull zip tie through the black grate on the back of the cooler. Pull the zip tie all the way through so that it is secure.

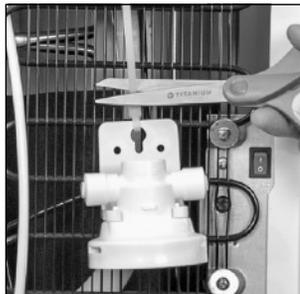

CUT THE END OF THE ZIP TIE


Using a scissors, carefully cut the end of the zip tie.

3 GALLONS




MOVE EMPTY TRASH CAN OR BUCKET UNDER FILTER HEAD

You will be flushing water through the filter so it's best to drain it into a trashcan or bucket.

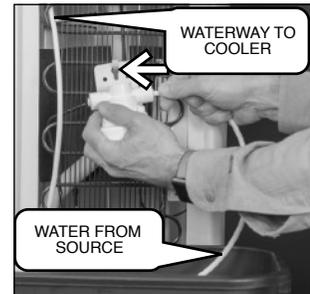

PUSH WATERWAY FROM WATER SOURCE INTO FILTER HEAD

Push the waterway from water source (not waterway to cooler) into head until it stops. Water flows in direction of arrow.

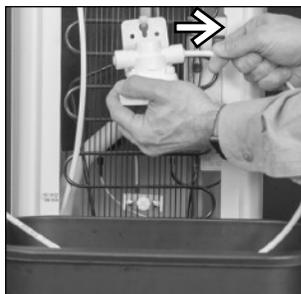


ONCE WATERWAY IS PUSHED IN, PULL GENTLY TO TEST

Pull on the waterway to check that it is secure.



WRITE DATE ON FILTER

Write today's date on the front of the filter so you know when you installed/replaced the filter. Filters should be changed every 6 months and are available on our website or on amazon.com.

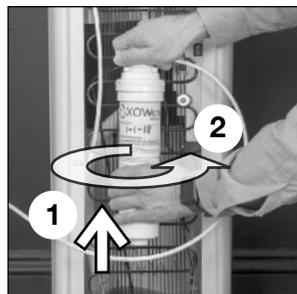

ATTACH FILTER TO HEAD BY PUSHING UP, THEN ROTATING

Push filter up into filter head by rotating it around until it "fits". Then, push all the way up - and then rotate until it stops.



ROTATE FILTER SO THE WATER WILL FLOW INTO TRASHCAN OR BUCKET


Gently rotate the bottom of the filter so that the water will flow out of the filter head and into the bucket.

INSTALLING THE FILTER



TURN WATER ON

Turn water on by rotating valve so that it is parallel with waterway. The valve may be behind the cooler or at the sink.

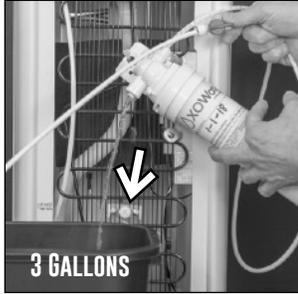


FLUSH THE FILTER

Place bucket, trash can or coffee pot under filter. Remember, water flows with arrow. Drain about 3 gallons of water to flush any carbon fines that can come loose during shipping.



TURN WATER OFF

To turn the water off, turn the valve so that it is perpendicular to the waterway.

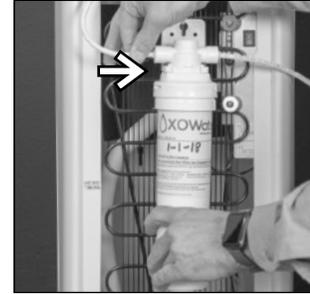


PUSH WATERWAY THAT GOES TO COOLER INTO FILTER HEAD

Remove the black cap and push cooler waterway that goes TO cooler into head until it stops. Pull gently to make sure that it's secure.



ONCE WATERWAY IS PUSHED IN, PULL GENTLY TO TEST

Pull on the waterway to check that it is secure. It should stay attached to the filter head.

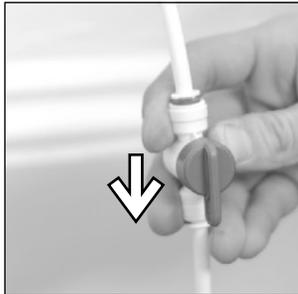

TURN WATER ON

Your filter is basically set up so you can now turn the water on. Please check




FILL HOT TANK

a) Squeeze the child-resistant hot (red) handle together. Then, push down. b) Hold the faucet like that until water comes out - can take several minutes. **Water must come out of faucet BEFORE turning on hot switch.**




PLUG INTO OUTLET

Plug cooler into standard 3-prong electrical outlet. You do not need to wait for the cooler to fill completely (as long as water was dispensed from the hot faucet).

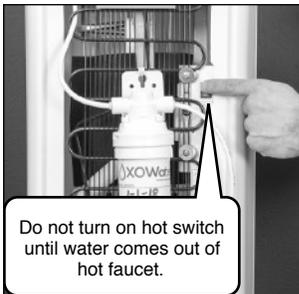

TURN ON HOT SWITCH

On back of cooler, turn on red hot switch. Be sure water has come out of hot faucet before turning on hot switch (or you can burn out heating element). **TIP:** If you do not want hot water to be dispensed from your cooler, leave this switch off.

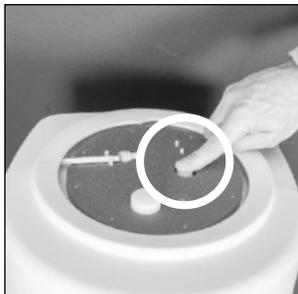

PRESS THE RESET BUTTON AGAIN

Press reset button one more time. Remember, if your cooler gets bumped, it can trip the safety backup float - which shuts off water to the cooler. This button resets that float.



REPLACE LID

Place the lid on top of the cooler. You do not need to replace the screws in the sides. This way, it's easier to access the reset button if it's needed in the future.



CHECK COLD & HOT WATER


It will take about 30 minutes or so for the cooler to heat and chill your water. After about a half hour, take a drink of cold and hot water. Enjoy!

TROUBLESHOOTING: NO WATER FROM COOLER




ROTATE COOLER TO BACK & REMOVE LID

Lift up on lid to remove. There may be screws in the sides of the lid that were put in for shipping. Please remove those first with a Phillips-head screwdriver. Set lid aside.

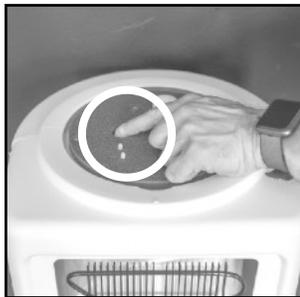

PRESS RESET BUTTON

If the backup float is tripped, it shuts off all water to the cooler as a safety precaution. This can also happen in transportation or if cooler gets bumped (after it is installed). **In the future, if water does not dispense, pushing the reset button usually fixes the issue.**

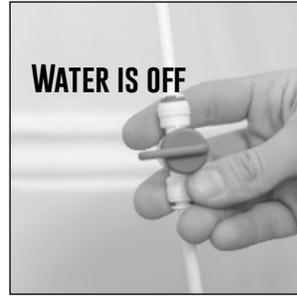

WATER IS OFF


IF LAST STEP DIDN'T GET WATER FLOWING: LET'S TRY SOMETHING ELSE. FIRST, TURN OFF WATER.

Find the water valve (it is usually blue and may be on the back of the cooler or under the sink). Turn the valve so it's perpendicular.



REMOVE FLOAT KIT LID

Remove the float kit lid so that you can check everything inside the reservoir. Just grab the tab on the sides and lift straight up

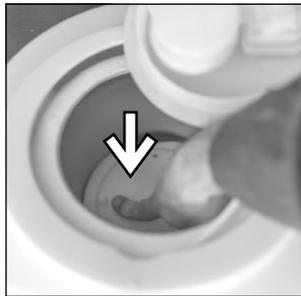


CHECK BAFFLE

Inside the stainless steel reservoir, you'll find a baffle. Occasionally, this can come loose in transport. If loose, it can rise up and trip the floats. If dislodged, push it into the center hole in the bottom of reservoir.



CHECK THE FLOATS

See the 2 air-filled "floats" - a main "float" (larger) that shuts off the water flow when reservoir is full - and a smaller backup float that shuts off water if the first float were to not activate.

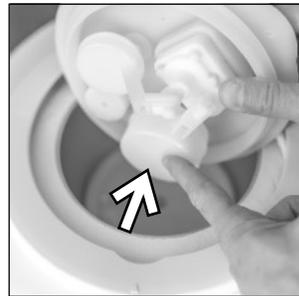

CHECK MAIN FLOAT

With clean hands (or with a clean utensil), press up on the Main Float to make sure that it moves up and down. If it doesn't move or if it's not attached, just click it into place.



CHECK BACKUP FLOAT

Now, press up on the Secondary Float to make sure that it moves up and down.



REPLACE FLOAT KIT LID

Press down on Float Kit Lid to replace it. Make sure it's pressed all the way down to seal the reservoir.



PRESET ONE MORE TIME AND REPLACE LID

Press the reset button again and replace the external lid on the cooler. If you removed the screws, you do not need to replace them.



WATER IS ON

TURN WATER ON


Turn water on by rotating valve so that it is parallel with the waterway and see if the cooler is working. (Water flow is off when it is perpendicular.)

CHANGING THE X05515 FILTER




WATER IS OFF

TURN THE WATER OFF
Locate the water shut off valve. It may be behind the cooler or under the closest sink.

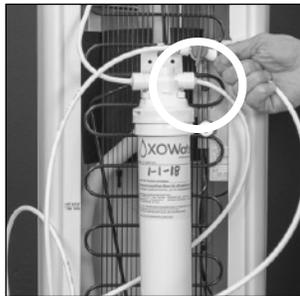


SHOWING VALVE IN OFF POSITION ON THE BACK OF THE COOLER

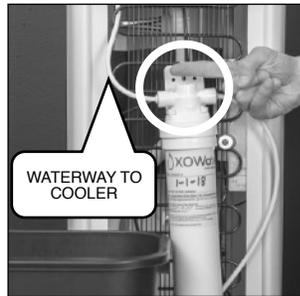

WATERWAY TO COOLER

LOOK FOR THE ARROW ON THE FILTER HEAD

You're going to be removing the waterway that goes TO cooler. Water flows WITH arrow on head. In photo above, it's waterway on the left - but it could be on the right.

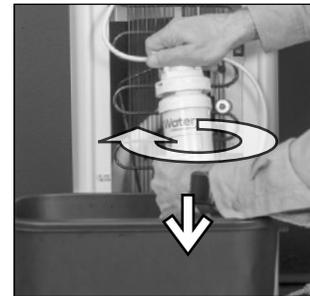

REMOVE FILTER
Move a trash can or bucket under the filter. While holding the filter head, rotate the filter in a clockwise direction. Then, pull it down away from the filter head to remove it.



DRAIN FILTER INTO TRASHCAN
You can spill the water out of the used filter into the trashcan or bucket.



REMOVE WATERWAY THAT GOES TO COOLER

REMOVE WATERWAY
Push in on ring around the water outlet while you simultaneously pull the waterway that goes TO the cooler. Pushing on the ring unlocks any waterway so it can be removed.




WRITE TODAY'S DATE ON THE NEW FILTER
The filter should be changed every 6 months. To be sure of this, write today's date on the filter label.




ATTACH FILTER HEAD TO FILTER BY PUSHING UP, THEN ROTATING
Push filter up into filter head by rotating it around until it "fits". Then, push all the way up - and rotate until it stops.



TURN ON WATER & FLUSH FILTER
Place bucket or trash can under filter. Remember, water flows with arrow. Drain about 3 gallons of water to flush any carbon fines that can come loose during shipping.
TURN WATER OFF

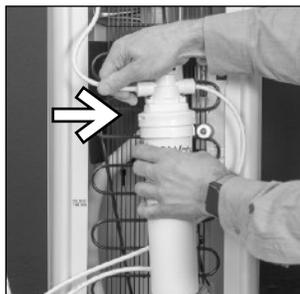

PUSH WATERWAY THAT GOES TO COOLER INTO FILTER HEAD
Remove the black cap and push the waterway that goes TO cooler into head until it stops. Pull gently to make sure that it's secure.

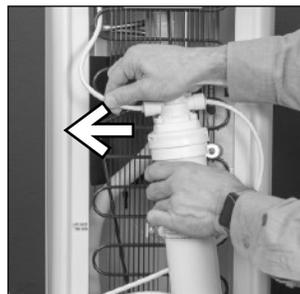

ONCE WATERWAY IS PUSHED IN, PULL GENTLY TO TEST
Pull on the waterway to check that it is secure. It should stay attached to the filter head.



TURN WATER ON
Turn water on by rotating valve so that it is parallel with the waterway and see if the cooler is working. (Water flow is off when it is perpendicular.)